



INSTRUCTIONS FOR MODEL ACTC-11000 TOKEN CLEANER

Prior to running the machine, read all instructions. Do not run the machine with the bowl empty. It is recommended to place the machine on a solid floor, not a bench, in case the bowl should vibrate loose and cause the machine to fall. If the machine is to be used on a bench, it should be locked in securely.

MEDIA. This machine comes adjusted to run a 10 lb load of parts and media. To run the machine make sure to fill the bowl with 5 lbs of media and 5 lbs (around 400 quarter size tokens) tokens. There is no need to add water or a cleaning solution to the bowl; the coins will be cleaned thoroughly with the dry media. You may harm the motor by not using enough media, be sure to fill the bowl to just below the wing nut level.

For best results run the machine for 3 to 4 hours to thoroughly clean the coins. The longer the machine is run the cleaner the coins will become. Do not run the machine for more than 8 hours per load. Be sure to replace the media when it stops cleaning the coins efficiently. The media will turn colors with each use and will eventually stop cleaning.