



High Visibility Bezel Installation Guide VFM Style

Configuration Coupon			
INSERT THIS END FIRST			
USE #2 PENCIL PHOTOCOPIY CAN BE USED			COMPLETE SECTIONS 1-4 ONLY
NUMBER OF BILL WAYS ACCEPTED	<input type="checkbox"/> 1 <input type="checkbox"/> 2 <input type="checkbox"/> 4		7
	HIGH ACCEPT HIGH SECURITY OFF		
\$1	<input type="checkbox"/>	<input type="checkbox"/>	2
\$2	<input type="checkbox"/>	<input type="checkbox"/>	
\$5	<input type="checkbox"/>	<input type="checkbox"/>	
\$10	<input type="checkbox"/>	<input type="checkbox"/>	
\$20	<input type="checkbox"/>	<input type="checkbox"/>	
HVB OPTIONS	<input type="checkbox"/> DENOM <input type="checkbox"/> RED <input type="checkbox"/> GREEN <input type="checkbox"/> BLUE		3
BEZEL LIGHTS ON/FLASHING	<input type="checkbox"/> ON <input type="checkbox"/> F		4
			5
	<input type="checkbox"/>		6
260057385 MODEL VN2700(R)			

GENERAL INFORMATION

The High Visibility Bezel (HVB) is designed to replace the existing bezel on your VN2700 bill validator. Once installed, the bill validator will mount back into your vending machine on the existing mounting studs.

Features of the High Visibility Bezel include:

- High impact 3 color LED's with dynamic motion to draw attention.
- Choice of Red, Green, or Blue LED lights or the ability to Strobe through all 3 colors. Or a blending combination of any colors.
- LED identification of denominations enabled for acceptance including \$1, \$5, \$10 and \$20.
- Easy access to the bill path when mounted
- All bezel options are configurable via the VN2700 configuration coupon.



MEI

Technical Support 1(800) 345-8172
 Customer Support 1(800) 345-8215
<http://www.meigroup.com>



For further information on vending machine fit or mounting kits, please contact your supplier or MEI authorized Service Center.

©2009 MEI
www.meigroup.com

Part # 250053424
 Revision G1

REQUIREMENT PRIOR TO INSTALLATION

Before you install a High Visibility Bezel (HVB) to the bill validator:

You must inspect the VN2700 and ensure that at least software version 1.17 is programmed into the bill validator. A VN2700 bill validator manufactured after week 48 of 2009 already has at least version 1.17. You can check this by inspecting the serial number of the validator. If the first three digits of your serial # are under 489, then you will need to have the VN2700 updated. Please use a BPM-Lite to update your bill validator.



HVB INSTALLATION INSTRUCTIONS

Remove power to the bill validator.

Remove your current bezel and mounting plate.


Remove the front cover above the bezel to expose the control board.

Install the mounting plate, HVB bezel, and screws provided in this kit.

Connect the flex cable to the control board connector. Insert the blue portion into the connector and lock it in place.

Put the control board cover back on.

Now you are ready to coupon configure your bill validator. Make sure all your switch settings on the bill validator are in the "OFF".

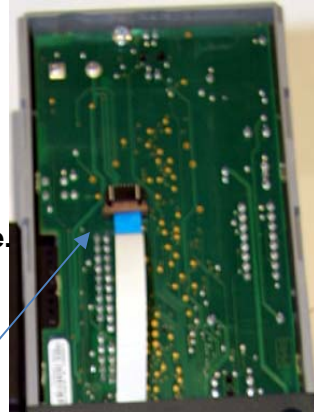

COUPON CONFIGURATION (ALL SWITCHES OFF)

1. Carefully cut the coupon around the edges. Copies are usable if made on a standard, carbon based, non-color copier, AND have the same dimensions as a \$1 bill (66 mm wide by 155 mm long).

2. Fill out the coupon using a #2 or HB pencil. Fill in one block for each line. Do not mark the back of the coupon.

Section 1 - Bill Direction Enable one or two-way (face-up) or four-way acceptance (all directions).

Section 2 - Bill Denomination Fill in one block for each denomination. Select High Accept for maximum bill acceptance. Select High Security for a higher level of discrimination. Select OFF to reject bills of that denomination.

Section 3 - High Visibility Bezel Options Fill in Denom to enable the denomination lights to operate. Leave blank for denomination lights to remain off. If color blending is desired, do not fill in any other box. Refer to Table 1 below for color combinations and fill in the appropriate box(es).

Boxes Filled In – RED, GREEN, BLUE	Resulting Colors on Bezel
None (no colors filled in)	Blend of all available colors
Blue only	Blue
Green only	Green
Green and Blue	Cyan
Red only	Red
Red and Blue	Magenta
Red and Green	Yellow
Red and Green and Blue	White

TABLE 1

Section 4 – Bezel Lights ON or Flashing

3. Locate the service button on the back of the unit (refer to Figure 4). Depress the button once to enter coupon set-up mode. Depressing again will exit the mode.

4. Insert the coupon, it will be returned. When returned please count the number of flashes. 10 flashes signal a good configuration. Any number of flashes less means that there is a problem in the section of the coupon corresponding to the flashes.

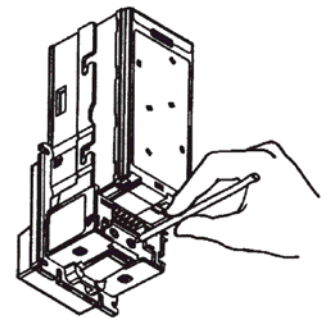


Figure 4