


Series 2000 Bill Programming Module (BPM)

The purpose the BPM is to download new software into AE2600 Bill Acceptors and VN2500/AE2400 with MEI FLASHPORT Bill Acceptors. Only VN2500/AE2400's manufactured during or after the 40th week of 1999 have the MEI FLASHPORT capability (see page 4 to determine when the unit was manufactured). All MEI FLASHPORT capable VN2500/AE2400's have the "with MEI FLASHPORT" logo on the product label on the box and on the side of the unit.




Download Procedure

- 1. Power down the machine.
- **2a.** For AE2400's only, place switch 8 to the "**ON**" position (Harness Enabled).
- **2b.** AE2600's that have been coupon configured for "Gaming Always Enable" and have all the option switches to the "OFF" position require switch 8 to be placed in the "ON" position prior to downloading.
- **3.** Connect the BPM (See next page), then power up the machine.
- 4. Once the bill acceptor completes a run and stack, (motors cycle) press the Red Button on the BPM till the Green LED illuminates to indicate power to the BPM.
- **5.** The Green LED will flash, then go solid. If Green LED does not light, turn to the Troubleshooting Section on page 3.
- **6.** Power down the machine; reconnect the original cables.
- **7.** For AE2400's and AE2600 (if necessary) place switch 8 to its original position.
- **8.** Resupply power to the machine.
- 9. Place the New Currency Ready Label on the Bill Acceptor to indicate the unit has been updated.

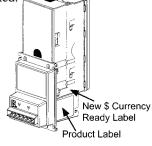

Connections:

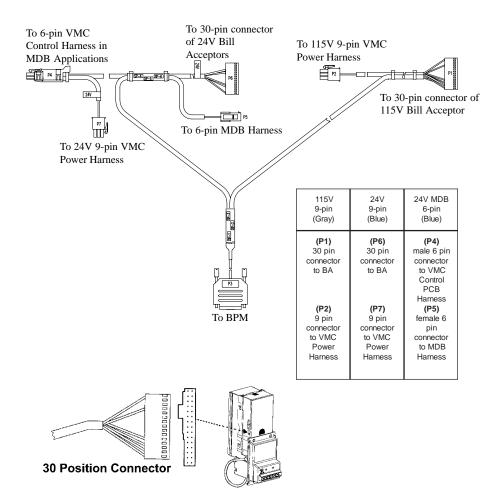

Trobleshooting:

Flash Code	Description of Code	Solution		
Solid Green	Bill Acceptor is Already Programmed	Bill Acceptor already has the software revision installed.		
Solid Red	BPM Not Connected to a Bill Acceptor	Check to ensure the harnesses between the BPM and the Bill Acceptor are seated properly.		
	AE2400 and AE2600 Only	Switch 8 needs to be to the "ON" position.		
Solid Amber/ No LED Illuminates	Low Battery	Change the batteries. NOTE : MEI does not reccomend downloading new software with low batteries. The BPM takes 2 AA batteries. The battery panel is located in back of BPM.		
1 Long Red Flash	No Credits	BPM may be out of credits. Follow procedure below to check how many credits are left in BPM.		
1 Short Red Flash	Invalid Product	The BPM does not have the revision software installed to download the model Bill Acceptor you are trying to upgrade. Example: A BPM for a Series 2000 Bill Acceptor cannot be used to upgrade the software in a Series 3000 Bill Acceptor.		
2 Short Red Flashes	Unrecoverable Error when Downloading	BPM failed during the download process. With the BPM still connected cycle power to Bill Acceptor (unit may not do a run and stack) then try again		
3 Short Red Flashes	BPM is defective	BPM will need to be returned to MEI for service.		
Flash Codes will repeat for 10 seconds.				

Check Number of Credits in BPM:


Disconnect BPM from bill acceptor. Press and hold the Red Button. The LED will first be solid red; then after 3 seconds the LED will start flashing a code to show how many credits are left in the BPM (see below). The flash code will repeat continuously while the Red Button is held down. **NOTE:** A credit is only taken from the BPM when a download is successful.

Red/Green Repeatedly .	
Green	
Red	

Examples:

Credits	Green Flashes	Red Flashes
5	0	5
17	1	7
30	3	0
		3

Serial Number Breakdown:

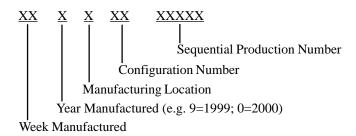

Questions should be directed to MEI Technical Support at 1-800-345-8172 or our web site: www.meiglobal.com .