


Hamilton Manufacturing Corporation

1026 Hamilton Dr. Holland, OH 43528 • Phone: 419-867-4858/800-837-5561 • Fax: 419-867-4857 • www.hamiltonmfg.com

GOLD COIN HOPPER WHEEL INSTALLATION INSTRUCTIONS

1. Turn off power to the machine.
2. Remove the hopper from the machine.
3. Empty the hopper.
4. If the hopper is an HSH-Q Model, remove the hopper cover and handle. If the hopper is an HSH-A or ER60-Q Model, remove the handle only.
5. Raise the baffle and remove it. The baffle will “pop” out of position.
6. For HSH-Q and HSH-A Models, insert a long phillips screwdriver through one of the sighting holes in the back of the hopper to remove the phillips head screws that secure the stir plate to the coin wheel. (Refer to Diagrams A and B.) If the hopper is an ER60-Q or an old style HSH, insert a long phillips screwdriver through the top of the hopper to remove the head screws.
7. Remove the stir plate and the old coin wheel. You will have to tilt the hopper backward to remove the coin wheel.
8. Position the new coin wheel on the hub with the raised dimples of the wheel facing up and away from the hopper wall. Be sure the raised part in the center of the hub fits into the center hole of the new pinwheel and align the screw holes. (Do not use the stir plate.)
9. Hold the coin wheel in place while using a 1/8” allen hex wrench to tighten the new button head cap screws. Make sure that the head sits in the counter bored holes. (Refer to Diagrams C and D)
10. Refill the hopper with \$1 gold coins.
11. Reattach the baffle by popping it back into place.
12. Reinstall the hopper cover and/or handle.
13. Reinsert the hopper into the machine.
14. Turn on power to the machine.

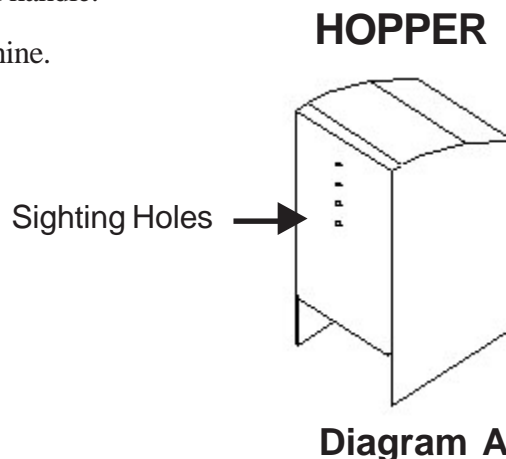

COIN WHEEL

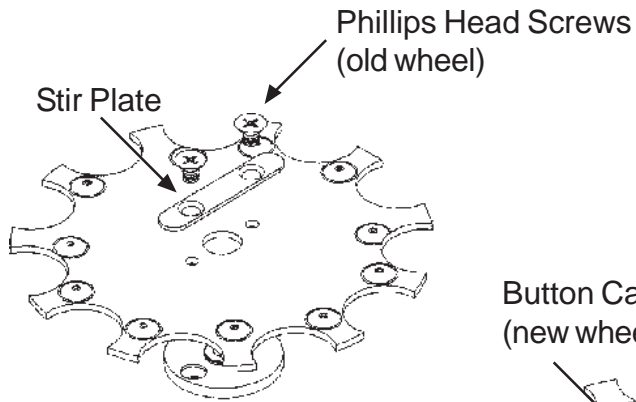


Diagram B

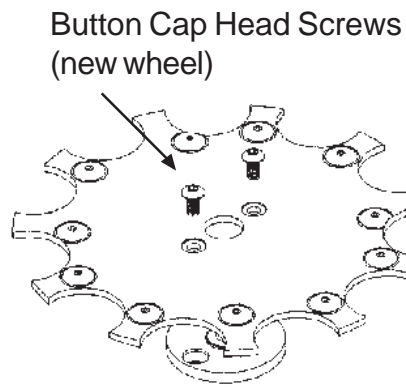


Diagram C

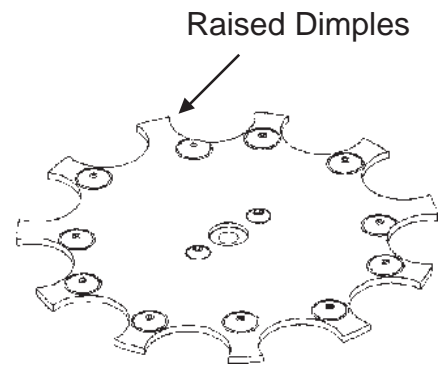


Diagram D