Installation Instructions

Subject: 12oz PET Bottled Product Set Up Kit **Date: 6/30/00**

Kit Number: 1121916 3D 79” Model **Rev A**

Vendors: UniVendor-1 Model: 600, 606 (3 Deep Can Vendor)

Purpose: Provide dispensing of special 12oz PET product (Double Depth, Single Column Only).

Kit Includes

Quantity	***Part Number***	***Description***
1	1120480	Lower Product Retainer Cage
4	8910-0252	Cable Clamp
4	V801422	Hex Head Tap Screw
1	1083449	Short Soldout Lever
1	1077457	Spacer Mech Front
1 pkg	1121822-5	Spacer – Magnetic Foam Pad
1	1067546	Close Retainer Cage label
1	1121917	Installation Instruction

See Figure 1

***Caution:* Disconnect power cord from power source before beginning installation**

Step #1 Mark front face of flexible retainer at 23” with permanent marker on all narrow column partitions.

Step #2 Cut at the mark and remove the flexible strap off the front of the partitions.

Step #3 Mark the front face of the partitions (see figure for model) from the left side with permanent marker 2 inches above the top of the mech plate flange, to locate the bottom pilot holes. To locate the top pilot holes, measure 22 inches above the top of the mech plate flange and mark the spot.

Step #4 Ensure the punch marks are centered on the edge of the partitions.

Step #5 Drill a pilot hole using a 1/8” drill bit, and finish each hole using a 5/32” bit.

Step #6 Install cable clamps (P/N 8910-0252) on horizontal rods of retainer cage.

Step #7 Remove mid strap and place lower product retainer cage (P/N1120480) behind it. Rebolt mid strap into place.

Step #8 Insert hex head tap screws (P/N V801422) through the slotted holes on cable clamp support (P/N 8910-0252 and insert into the 5/32” hole in the partitions (Check sliding of retainer and adjust cable clamp clips if too tight).

Step #9 Place (Close Retainer Cage) label (P/N 1067546) in center of mid strap.

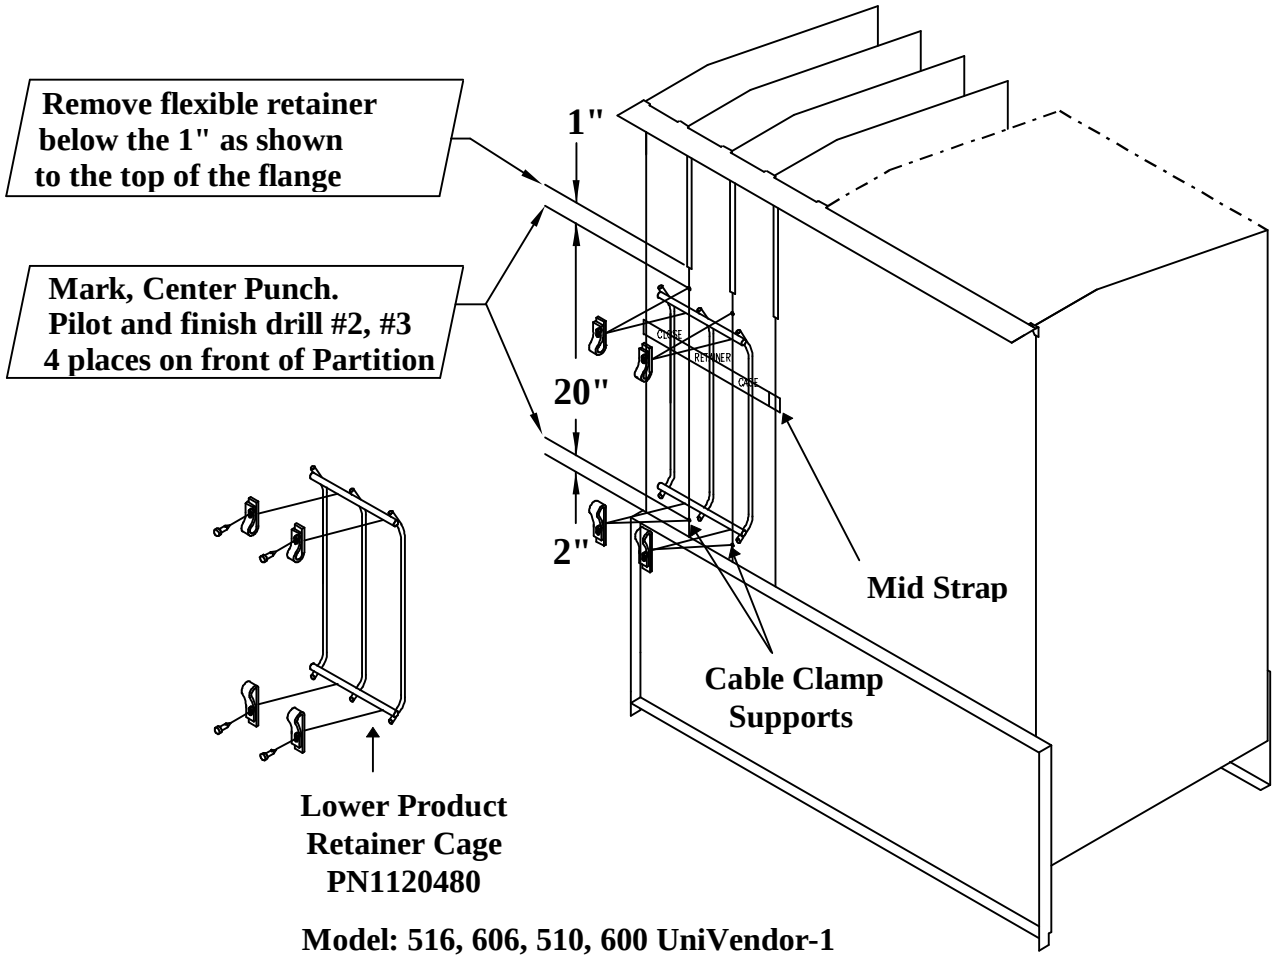

Figure 1

Instructions for Loading 12oz PET Bottled Product

Step #1 Back Spacer Location is Critical for Vending Product. Product Length Will Effect Vendibility. Locate Back Spacer into Proper Slot. (See Figure 2. for BK. SP. Location)

Step #2 Set cam to #2 for double depth.

Step #3 Install short soldout lever (P/N 1083449) Locate spring on right (low tension) side.

Step #4 Install soldout spacer on front mech plate (P/N 1077457) below soldout lever.

Step #5 Install two of the 33" long magnetic foam pads (P/N1121822-5) on the right side partition.

Locate pads as shown in Figure 3 above the .37 product side spacer (P/N1041282)

Step #6 Install gage bar into position #2 (Center hole).

Step #7 Install existing can side spacer (P/N 1041282) -not included in kit-

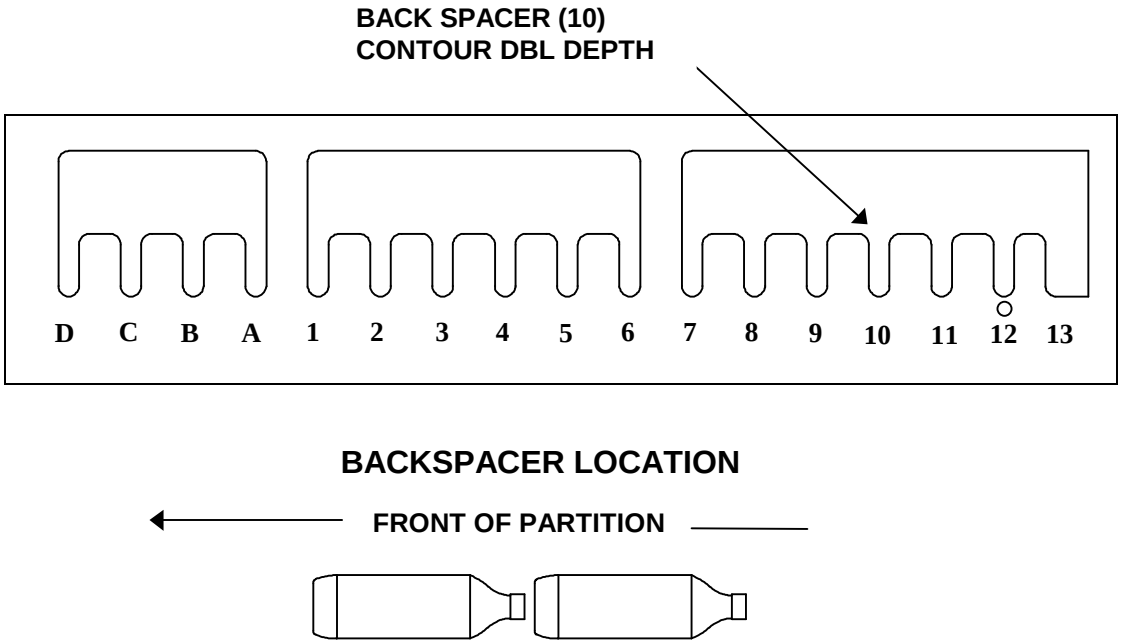

Note: Placement of bottle cap is to the back of the vendor

Figure 2

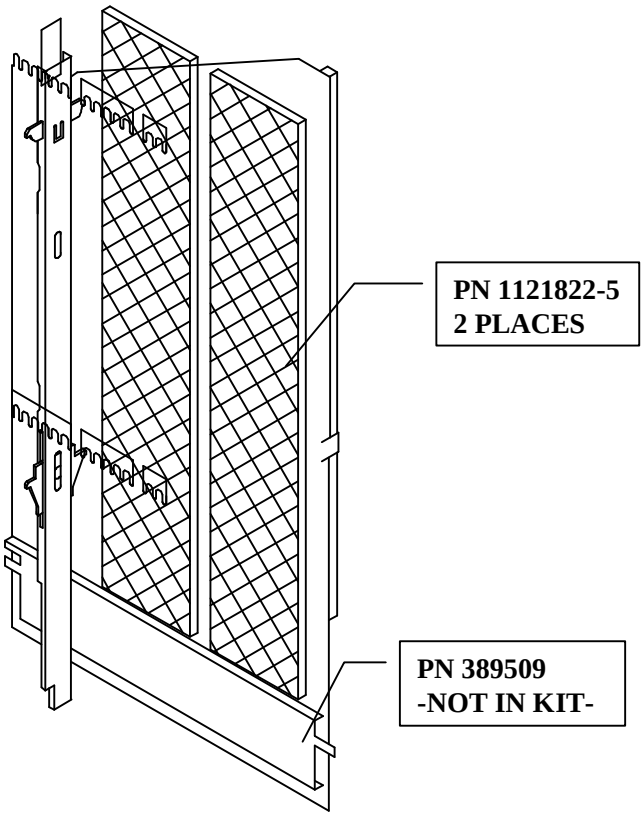

Right Side Partition

Figure 3

Tools required

- Hammer
- Drill
- Knife
- Permanent Marker
- Phillips Screw Driver or 5/16 (8mm) socket Driver
- Center Punch
- 1/8” and 5/32” high speed drill bits
- Measuring Tape