Vendo® Engineering *Uni-1 V392* *Set Up Guide*

Size: 500ml **Rev. A** **Date 2/10/00**
Pkg. Description/Type: COKE SPRITE CONTOUR
Franchise: UK COKE SCHWEPPES **KIT#**

Column Setup

Cam Setting	Back Spacer	Gage Bar Location	Side Spacer	Sold Out Flap	Sold Out Spacer
1 Notch	3	#1 Position	N/A	Long PN388630 Spring Loc. Rt (Low Tension) Side	N/A

Note: To properly vend product the Uni-1 must have the columns set up as illustrated.

Set Up Guide

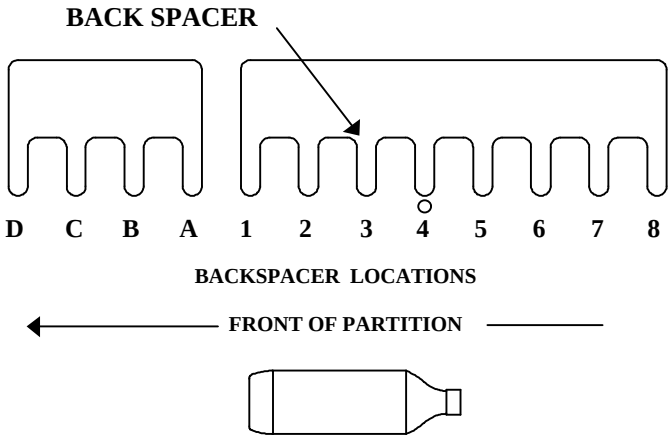

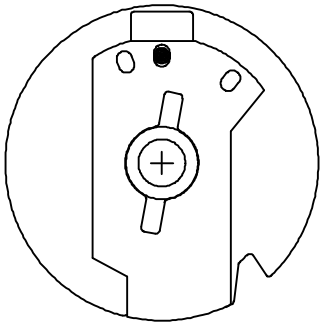

Setting #3
Single Depth

Note: Placement of bottle caps is to the back of the vendor

FOR OTHER PRODUCT SET-UP GUIDES, CONTACT THE VENDO COMPANY.
TEL: (559) 439-1770 FAX: (559) 439-2083.

Installation Instruction #