Installation Instructions

Subject: 12oz PET Bottled Product Set Up Kit **Date: 10/21/99**

Kit Number: 1120648 **Rev C**

Vendors: UniVendor-1: Model: 324

Purpose: Provide dispensing of special 12oz PET product (Single Depth Only).

Kit Includes

Quantity	*Part Number*	*Description*
1	1120650	Lower Product Retainer Cage
4	8910-0252	Cable Clamp
4	V801422	Hex Head Tap Screw
1	1083449	Short Soldout Lever
1	1077457	Spacer Front Mech
1	1067546	Close Retainer Cage label
1	1120649	Installation Instruction

***Caution:* Disconnect power cord from power source before beginning installation**

Installation of Retainer Cage (see Figure 1)

Step #1 Mark front face of flexible retainer at 23” with permanent marker on all of the narrow column partitions.

Step #2 Cut at the mark and remove the flexible strap off the front of the partitions.

Step #3 Mark the front face of the partitions #2 & #3 from the left side with permanent marker 2 inches above the top of the mech plate flange, to locate the bottom pilot holes. To locate the top pilot holes, measure 22 inches above the top of the mech plate flange and mark the spot. Ensure the punch marks are centered on the edge of the partitions.

Step #4 Drill a pilot hole using a 1/8” drill bit, and finish each hole using a 5/32” bit.

Step #5 Install cable clamp supports (P/N 8910-0252) on horizontal rods of retainer cage (see Figure 1).

Step #6 Remove mid strap and place lower product retainer cage (P/N1120650) behind it. Rebolt mid strap into place.

Step #7 Insert hex head tap screws (P/N V801422) through the slotted holes on cable clamp support (P/N 8910-0252 and insert into the 5/32” hole in the partitions (Check sliding of retainer and adjust cable clamp clips if to tight).

Step #8 Place (Close Retainer Cage) label (P/N 1067546) in center of mid strap.

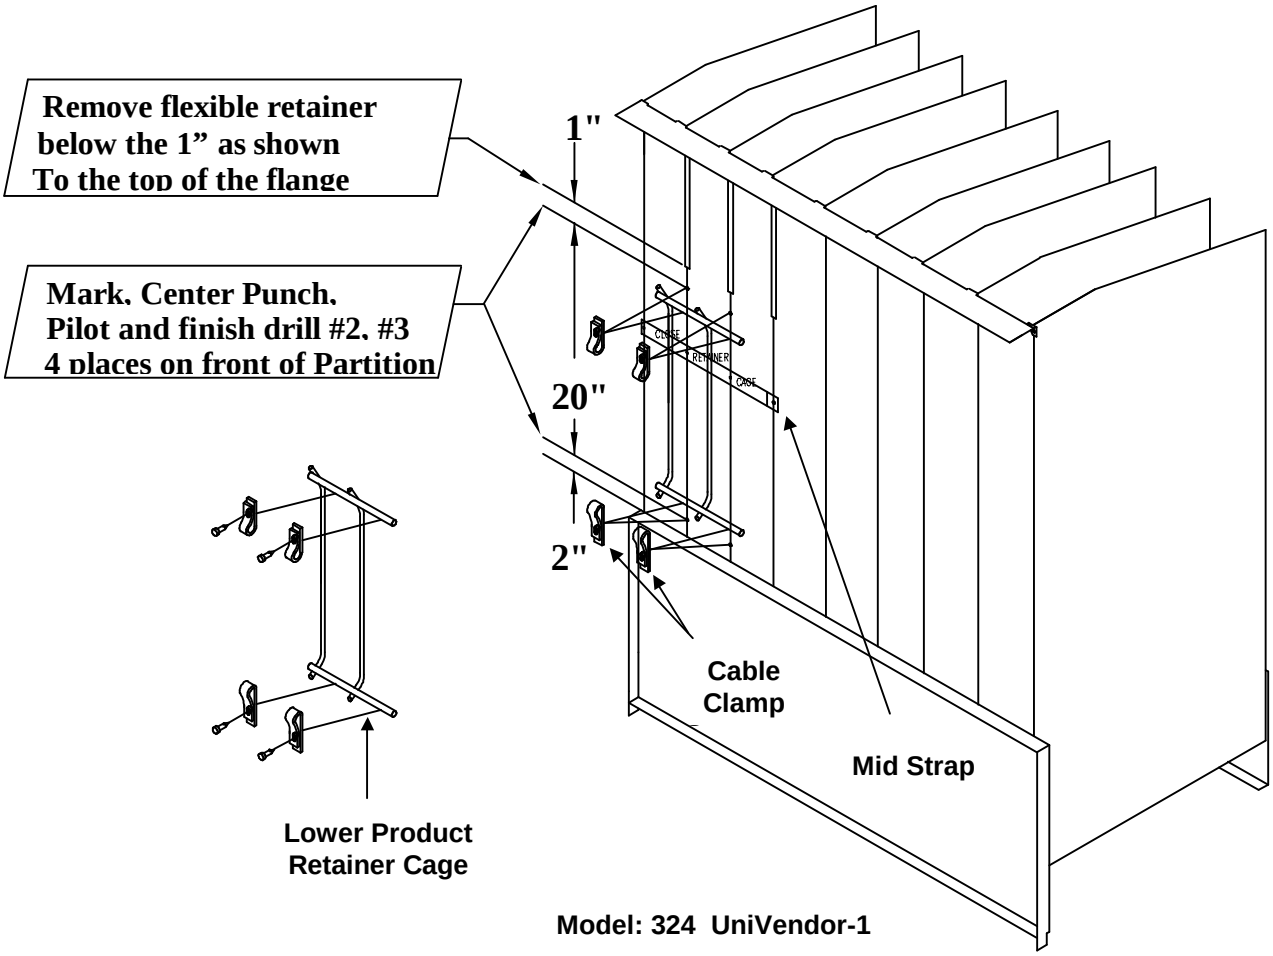
Remove flexible retainer
below the 1” as shown
To the top of the flange
Mark, Center Punch,
Pilot and finish drill #2, #3
4 places on front of Partition
1"
20"
2"
CASE
RETAINER
CASE
Cable
Clamp
Mid Strap
Lower Product
Retainer Cage
Model: 324 UniVendor-1

Figure 1

Model: 324 UniVendor-1 12oz Bottled Product Set Up Kit

Instructions for Loading 12oz PET Bottled Product

Step #1 Back Spacer Location is Critical for Vending Product. Product Length Will Effect Vendibility. Locate Back Spacer into Proper Slot. (See Figure 2. for BK. SP. Location & Product Type - *)

Step #2 Set cam to #1.

Step #3 Install short soldout lever (P/N 1083449) Locate spring on right (low tension) side.

Step #4 Install soldout spacer on front mech plate (P/N 1077457) below soldout lever.

Step #5 Install gage bar into position #1 (Left hole).

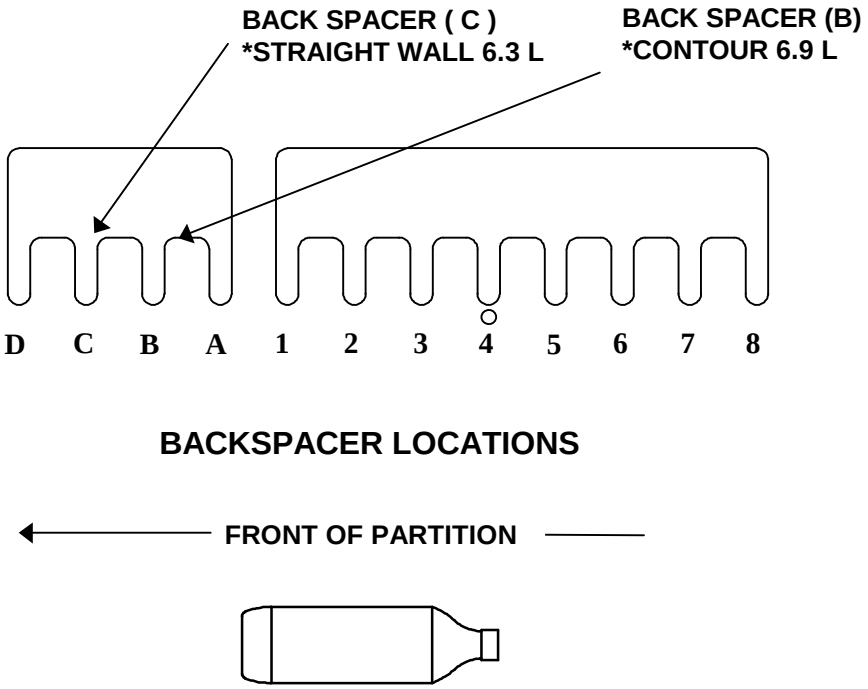

BACKSPACER LOCATIONS

Note: Placement of bottle cap is to the back of the vendor

Figure 2

Tools required

- Hammer
- Drill
- Knife
- Permanent Marker
- Phillips Screw Driver or 5/16 (8mm) socket Driver
- Center Punch
- 1/8” and 5/32” high speed drill bits
- Measuring Tape