Installation Instructions

Subject: 12oz Pepsi PET Junior straight wall product kit **Date: 8/12/99**

Kit Number: 1120637 **Rev C**

Vendors: UniVendor-1: 186, 270, 280

Purpose: Provide dispensing of special 12oz PET product (Single Depth Only).

Kit Includes

Quantity	*Part Number*	*Description*
1	1083449	Short Soldout Lever
1	1077457	Spacer Front Mech
1	1120638	Installation Instruction

***Caution:* Disconnect power cord from power source before beginning installation**

Instructions for Loading 12oz Pepsi bottles

Step #1 Install short soldout lever (P/N 1083449) Locate spring on right (low tension) side.

Step #2 Install soldout spacer on front mech plate (P/N 1077457) below soldout lever.

Step #3 Install gage bar into position #1 (Left hole).

Step #4 Locate Back Spacer into slot position #C (See Figure 1).

Step #5 Set cam to #1.

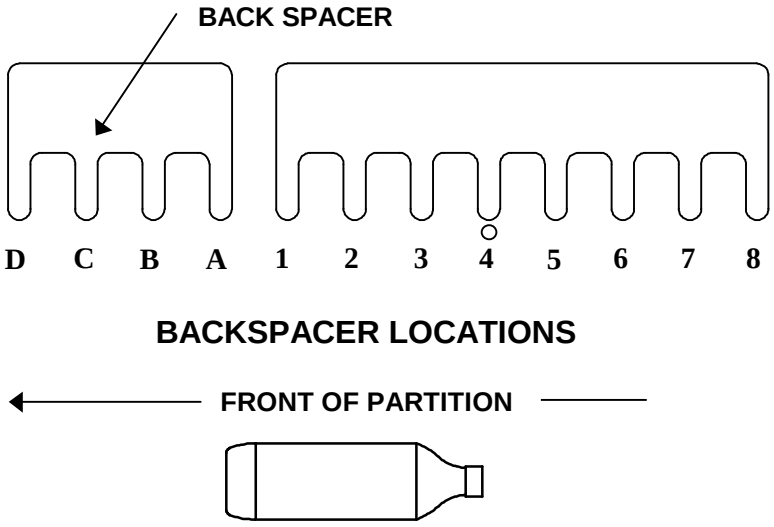

Note: Placement of bottle cap is to the back of the vendor

Figure 1